


Measuring Your Roman Blind

The Anna Louisa Interiors guide to measuring for your made-to-measure Roman blind.

This is a super simple process and all you need is a pencil and measuring tape.



Inside The Recess

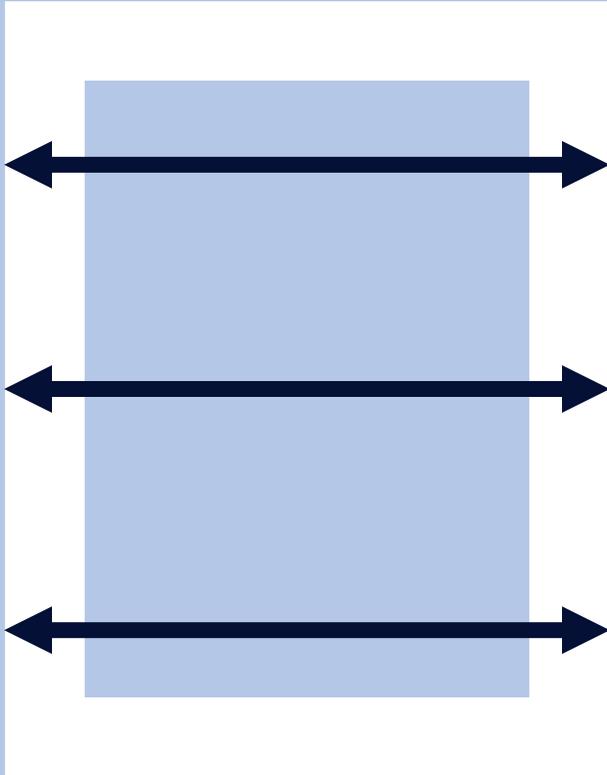

Width


Step 1: Width

1. Using a tape measure, measure the inside width of the recess in three separate places.
2. Select the smallest of these three measurements.

Note: please provide this exact measurement as we will calculate the necessary dimensions required to make room for the brackets.



Inside The Recess

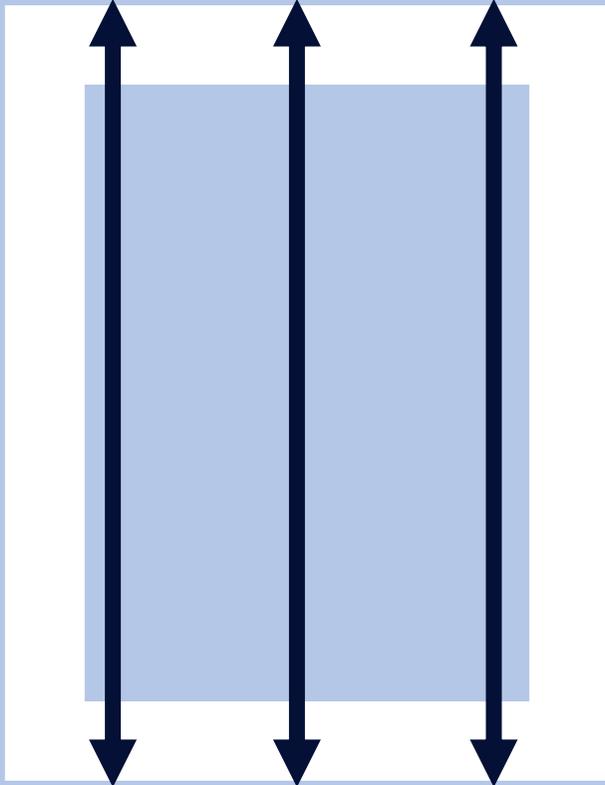

Height

Step 2: Height

1. Measure the height of the recess from top to sill in three places.
2. Select the smallest of these three measurements.

Note: make sure to take into account any obstacles such as window handles. This shouldn't impact the height measurement, but will determine how far out the blind needs to be when fitted.




Inside The Recess

Step 3: Fitting Height

1. Finally, measure from the top of the recess to the floor.

Note: we need this measurement to work out the length of the chain, as for child safety it must be 150cm above the floor.

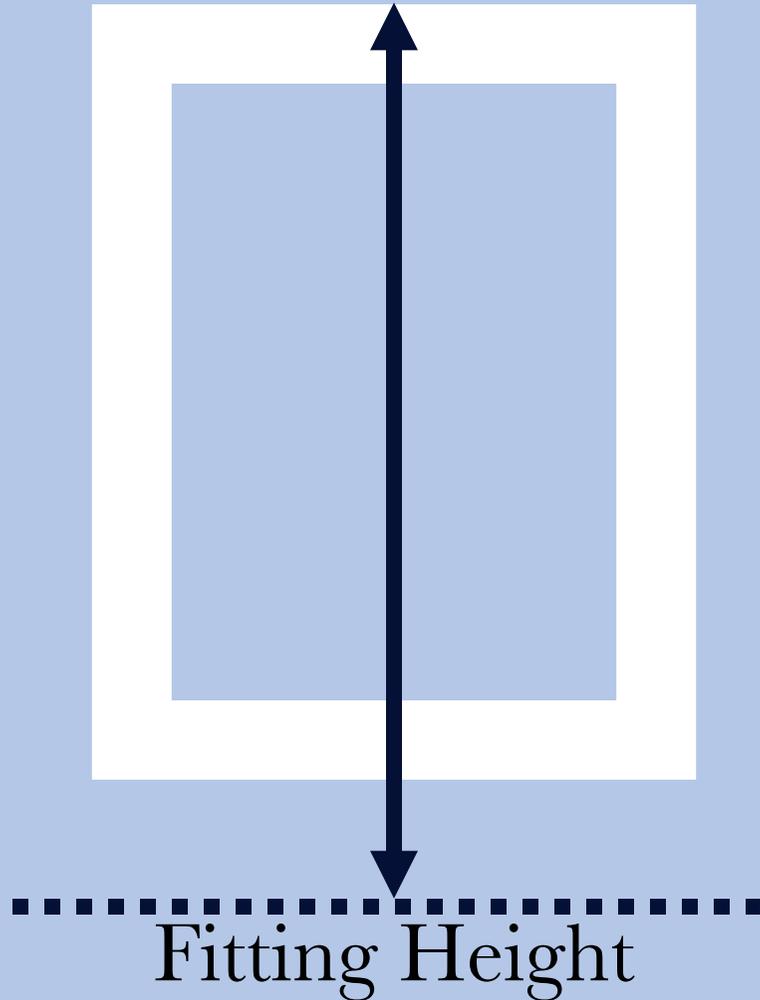


Outside The Recess

Step 1: Width

1. Using a tape measure, measure the width of the recess.
2. To ensure less light leaks out either side, we recommend adding 10cm to the width, but this is personal to you and you may wish to add more or less.

Note: please look out for obstacles that may limit the extra width you can have e.g. light switches.

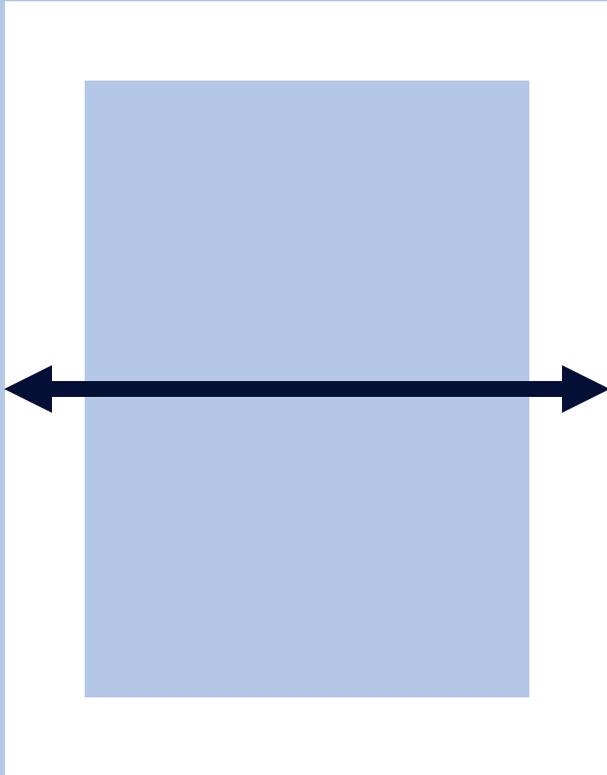

Width



Outside The Recess


Step 2: Height

1. Measure the height of the recess from top to sill.
2. Add an additional 10cm to work out the installation height above the recess.
3. You may wish for your blind to go below the sill, if so measure to the point where you would like the bottom of the blind to go.


Note: watch out for protruding sills that may prevent the blind from going lower than sitting on the sill.



Height

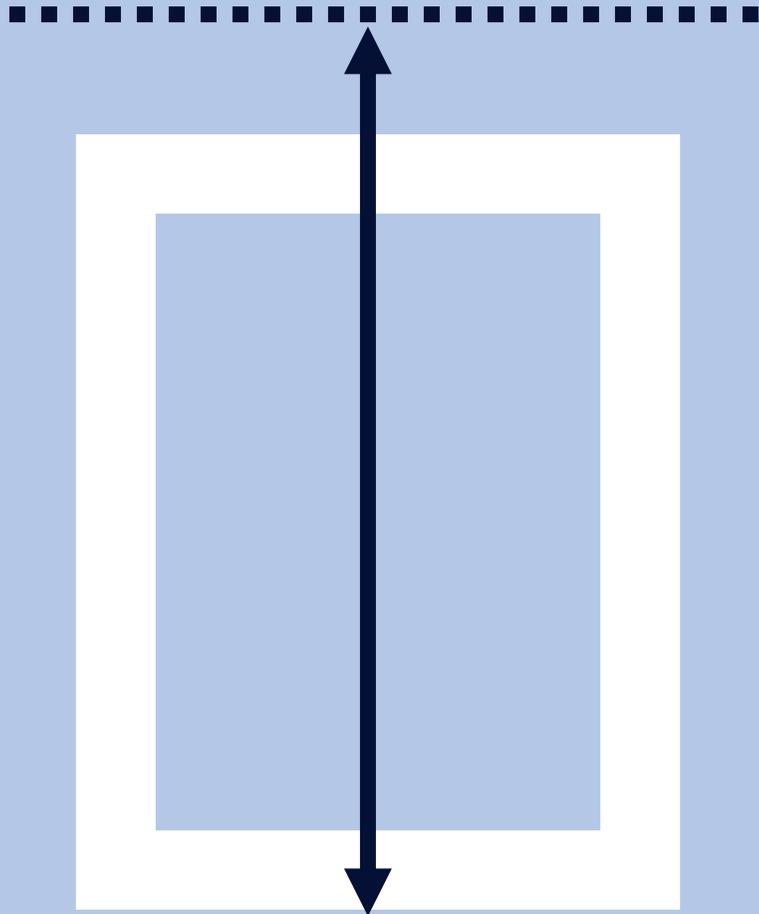

Outside The Recess

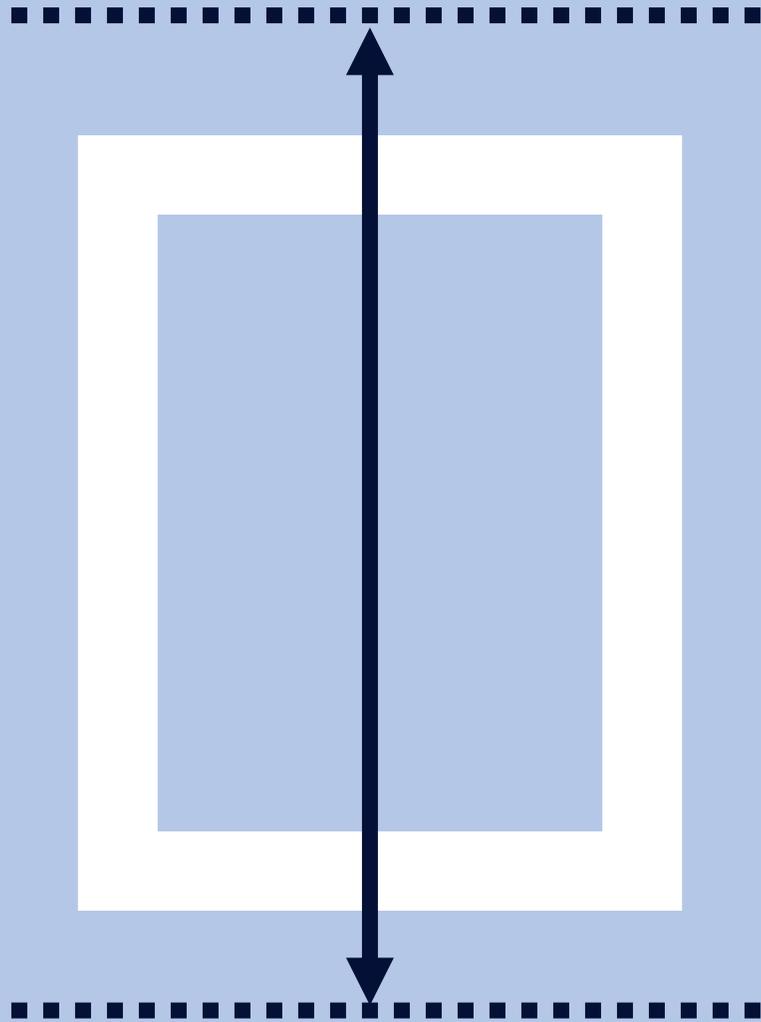

Fitting Height

Step 3: Fitting Height

1. Finally, measure the height from the top of the recess to the floor.
2. Add 10 cm to this to include the installation height above the recess.

Note: we need this measurement to work out the length of the chain, as for child safety it must be 150cm above the floor.

